

HOW TO GREASE A NUWIND CENTRIFUGE

When the icons to the right appear, apply synthetic grease using the brush provided to the points indicated.



Frequency of this reminder can be changed in User Preferences by pressing this icon:



1. Lid Latch



2. Motor Drive Shaft



3. Each Rotor Trunnion

Up to 8 on appropriate rotors